

R13U

CAUTION/WARNING

STATUS

PARAMETER	LIMIT VOLTS				4	5	6	7	8	9
	0	1	2	3						
00	X	•	X	X						
01										
02										
03										
04										
05										
06										
07										
08										
09										
10										
11										

(XDS1)

TONE VOLUME

(R1) (R2)

PARAM STATUS TRIPPED ▼

MEMORY READ ▼

LAMP TEST LEFT ▼

(S1) (S2) (S3)

INHIBITED ▲ CLEAR ▲ RIGHT ▲

PARAMETER SELECT

1 5 0

2

dP/dT SENSOR CABIN

(S5) CABIN/SPACELAB

LIMIT SET

VALUE

1 5 0

X X X

VOLTS

LIMIT UPPER

FUNC SET ▼

PARAM ENABLE ▼

(S7) (S8) (S9)

LOWER READ ▲ INHIBIT ▲



(32V73A13A1)